


Thank you for purchasing the HR80-RX receiver. This product is part of a wireless transmitter/receiver set of switches to be installed in equipment requiring relay contact input to a control motor, for example an automatic door. To ensure the safe and correct use of this product, please read carefully all instructions throughout this manual.

COMPOSITION & SPECIFICATIONS

Composition	Power connection wire(gray)	2 pieces
	Output contact wire(yellow)	2 pieces
	Fixing screws (4 x 16)	2
	User's Manual	1 copy
Specification	frequency	FM 433.92MHz
	Power supply	AC/DC 12V~30V
	Power consumption	200mA Under
	Relay contact capacity	AC125V/0.5A, DC30V/1A
	Reception sensitivity	-107 dBm
	Size	155x43x21mm
	Operating temperature	-20℃ ~50℃

HOW TO INSTALL HR80-RX (Receiver)

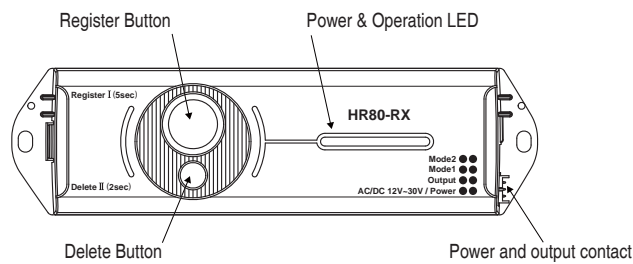

Descriptions of Designations

- ① Register Button : Key in the correct sequence of digits on the WL transmitter, immediately press and hold the Register Button for 5 seconds
- ② Delete Button : Key in the correct sequence of digits on the WL transmitter, immediately press and hold the Delete Button for approx. 2 seconds
- ③ Power LED : LED light is moving during power on
- ④ Operation LED : LED light blinks when user press push button switches (Transmitter).
- ⑤ To delete all registered transmitters : Press and hold Delete & Register button at same time for 5sec.
- ⑥ Open maintenance function : While in digital touch function, press the HR80 WL transmitter for 5 seconds to keep the door in the open position.
To close again to normal operation, simply press the transmitter again.

- * How to Register : Key in the correct sequence of digits on the WL transmitter, when red antenna icon starts blinking, immediately press and hold the Register Button on the receiver (RX) for 5 seconds
- * Factory default is off status.

HR80-RX WIRING

