

Thank you for purchasing the dual purpose HR80-WL Wireless Digital Door Key / Digital Touch Pad.



COMPOSITION & SPECIFICATIONS

Composition	Wireless Digital Door Key main body	1
	Wireless receiver (HR80-RX)	1
	Wireless remote control (FT-240) (optional)	1
	3M double-sided adhesive tape	1
	Battery	4 X 1.5V AAA size
Specification	User's Manual	1 copy
	Transmission frequency	FM 433.92MHz
	Battery	4 X 1.5V AAA size
	Operating temperature	-20°C ~ 50°C
	The number of programmable personal entry codes (passwords)	20
	Dimensions (HR80-WL)	150x41x20mm
International Protection	IP54 (water proof)	

GENERAL INFORMATION

Upper case

Battery

Lower case

Screw bolt for disassembling /assembling

Water proof pad (Silicone rubber)
(When assembling the product, the water proof pad should not be twisted)

3M double sided tape

<Precaution for Installation>
Please make sure that you press firmly down the red plate after attaching the lower case.

Disassembling the upper case

Unfasten the screw bolt, and use a flat blade (⊖)screwdriver to disassemble it, as shown in the figure below.






Water proof pad (Silicone rubber)
Between outside gaps

DIMENSION

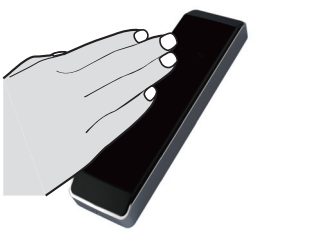



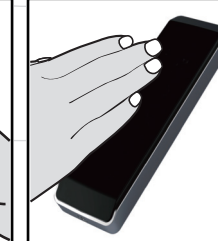
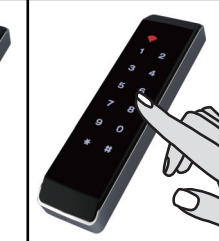
unit : m/m

STEP 1 Pairing your HR80-WL Wireless Door Key with the Receiver (HR80-RX)

The HR80 will begin operating on the default setting which is (0) or Digital Keypad Mode.


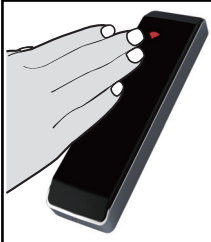

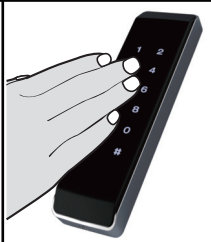
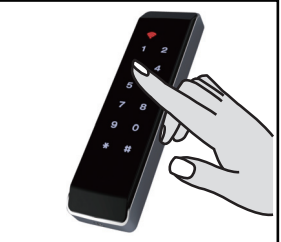

 

		 wireless receiver(HR80-RX)	
Touch the middle of the key pad.	Key in the following digits 1,2,3,4 1,2,3,4 #1#1	While  on the wireless door key (HR80-WL) is blinking, press and hold the Register Button on the wireless receiver (HR80-RX) for 5 seconds.	* (End)

Note : If you want to transmit the signal again from the HR80-WL to start the pairing process again, simply press 1. 4 digit Master Code allows access to settings menu (only 1 code). 4 digit keycode opens the door(up to 20 codes).

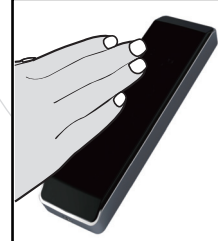STEP 2 Set a new 4 digit Master Code for main menu access		STEP 3 Set a Keycode Password		STEP 4 Select your required function, function (0) Digital Key Pad or function (1) Digital Push Pad.	
					
Touch the middle of the key pad.	Key in the following digits if setting a master code for the first time. 1,2,3,4 1,2,3,4 #### 1,2,3,4# (insert new master code) # If changing a previous installed master code, perform the sequence above and replace the default digits 1,2,3,4 with the current master code.	Touch the middle of the key pad.	Key in your 4 digital Master Code twice, then press #2# (insert 4 digit keycode password) # *	Touch the middle of the key pad.	Key in your 4 digital Master Code twice, then press #3# (insert 1 or 0) # *
<p>Note : Once the keycode password is saved, test by entering the saved keycode and then press the # key. The red transmit icon on the HR80-WL should be displayed showing it is operating correctly.</p>			<p>Note : Upon initially pairing the HR80-WL, it is already operating as function (0) Digital Keypad mode.</p>		

ADDITIONAL INSTRUCTIONS

1. Swap from Function (0) Digital Key Pad to function (1) Digital Push Pad.
2. Swap from Function (1) Digital Touch Pad back to function (0) Digital Key Pad.

 
 Key in the following digits (Enter your saved 4 digit keycode) followed by the keys 9 * , Digital Touch Pad will be activated.				
Touch the key pad, the indicator  will appear and the door key will be operating.	Touch the middle of the key pad, the indicator  will appear for about 1 second.	After  disappears, tap HR80-WL several time within 0.5 seconds.	The entire numeric and symbol keys will be displayed.	Key in your keycode password followed by the keys 9 *

3. Deleting a Password


Key in 4 digit Master Code twice #8#(then 4 digit keycode you want to delete) # * (ON THE HR80-WL).

****Note**** The password must be deleted from the HR80-RX receiver also.
Key in 4 digit Master Code twice #1#(then 4 digit keycode you want to delete) * with blinking red icon on the HR80-WL, press and hold the Delete Button on the wireless receiver (HR80-RX) for 2 seconds.

Wireless door key (HR80-WL)



Wireless Receiver (HR80-RX)

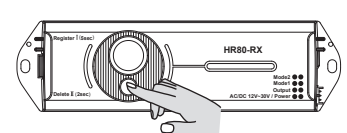

Press and hold the Delete button for 2 seconds.

4. Clear All Passwords

Key in 4 digit Master Code twice #7#

5. Restore factory settings

Key in your 4 digit Master Code twice * #. Once completed, your 4 digit Master Code is deleted. To set a new Master Code, repeat step 2 above.