Digipass Keypad

132,6

113

42,5

DIGIPASS

by

A 9 7 5 3 1

B 0 8 6 4 2
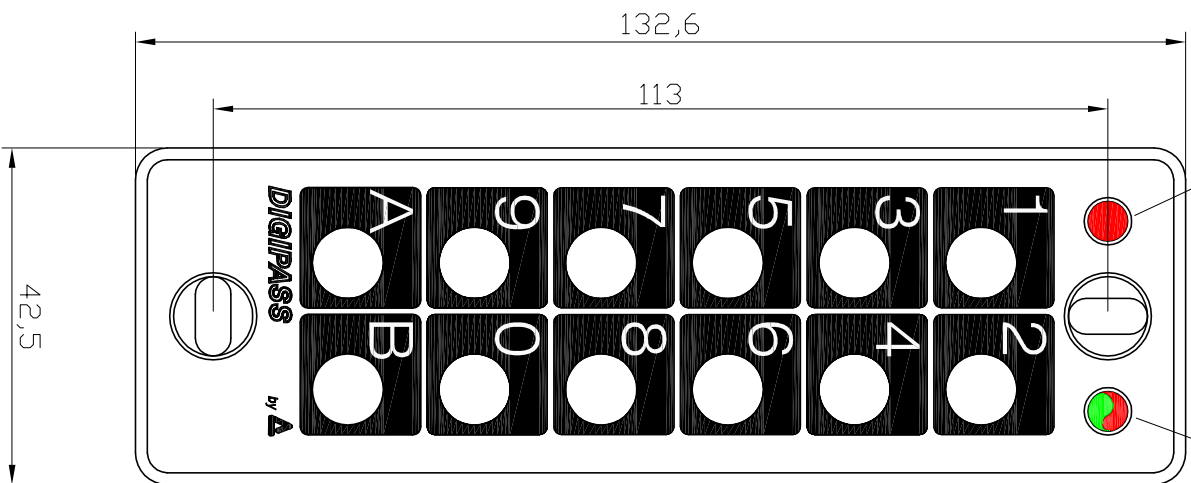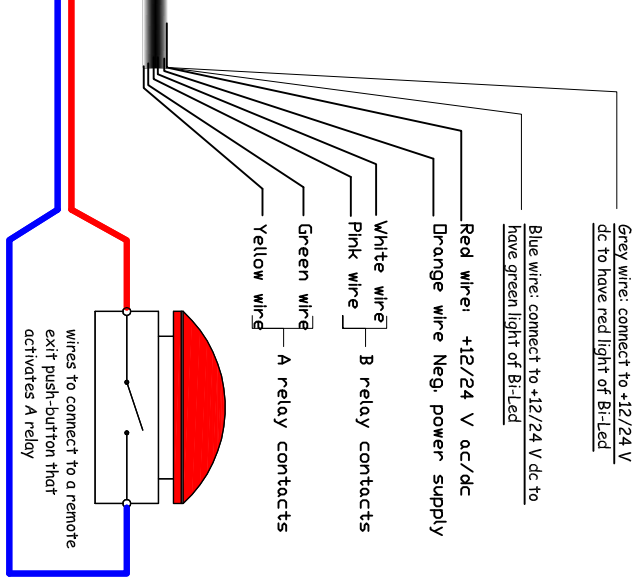
Red LED for programme mode

2 colors LED, green & red

24 mm thickness

12/2011

B relay

A relay

Plastic tube to remove in case of emergency procedure

wires to connect to a remote exit push-button that activates A relay

Yellow wire

Green wire ⎤
        ⎦ A relay contacts

Pink wire ⎤
White wire ⎦ B relay contacts

Orange wire Neg. power supply

Red wire: +12/24 V ac/dc

Blue wire: connect to +12/24 V dc to have green light of Bi-Led

Grey wire: connect to +12/24 V dc to have red light of Bi-Led